


# Winning large-scale projects!

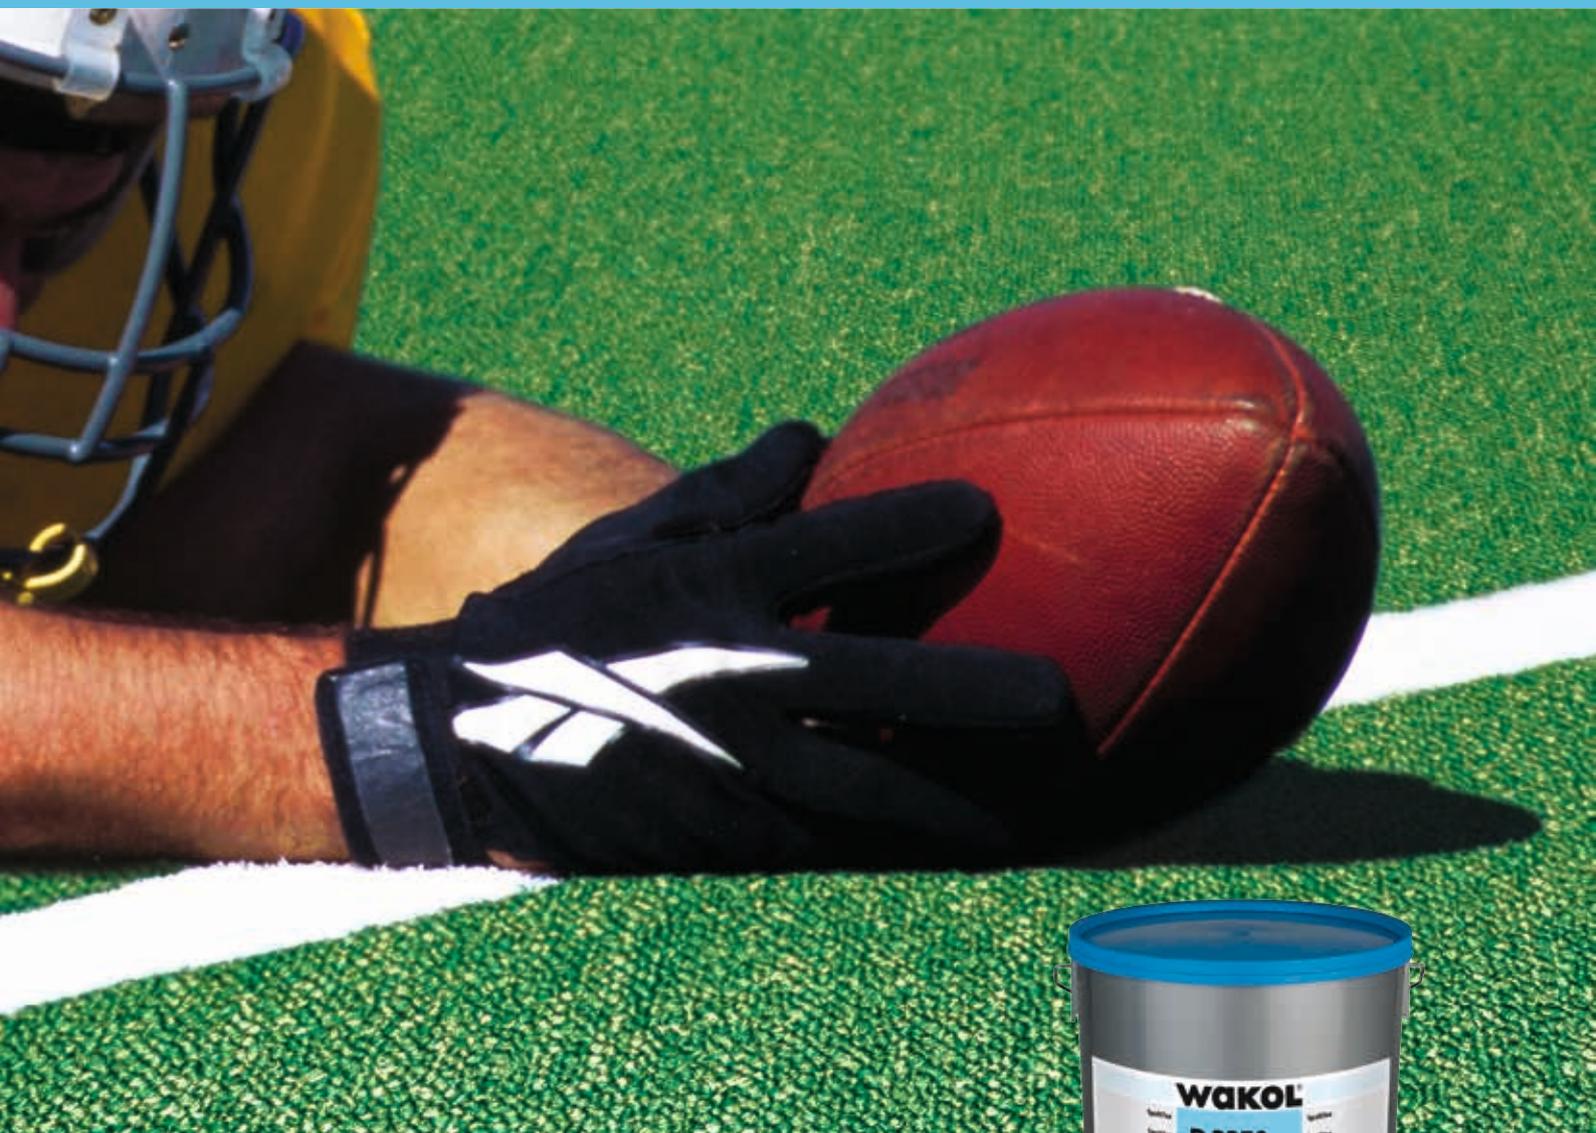

## WAKOL D 3270 SpaltTex

- Unique** – separates into two layers when removed
- Time-saving** – for quick and professional carpet changing
- Ingenious** – minimum renovation effort
- Economical** – unbeatably efficient usage
- Modern** – best emissions class, EMICODE EC1 PLUS

Product:



**WAKOL®**  
Anspruch verbindet



## With WAKOL D 3270 SpaltTex, you will win more orders



### Save time for your customers

For hotels and commercial buildings such as offices and specialist markets, only one thing counts: Speed! So emphasise in your offer that you use WAKOL D 3270 SpaltTex, which drastically reduces the time needed for the next renovation.

The benefit to your customer: Minimum down time.

### Less renovation effort for your customers

When old carpeting is removed, WAKOL D 3270 SpaltTex separates into two definite layers: One layer adheres to the carpet, the other remains dry and neat on the floor. The floor is immediately ready for application of a new carpet adhesive. WAKOL D 3270 SpaltTex eliminates the problem of sections of the covering breaking off and adhering firmly, thus requiring troublesome removal.

Customer benefit: Minimum renovation effort.

### 30% less consumption reduces your costs

Despite the "zip fastener effect", WAKOL D 3270 SpaltTex is not more expensive. Consumption is even 30% less than with standard adhesives! Even if the price for WAKOL D 3270 SpaltTex is higher, your offer for large-scale projects is more favourable – increasing your chances of winning the order.



### Areas of use for WAKOL D 3270 SpaltTex

- Tufting flooring for large-scale projects and homes
- On absorbent subfloors with and without floor heating
- On old SpaltTex layers
- For textile floorings with synthetic double backing
- For textile floorings with fleece backing
- For textile floorings with latex foam backing

### Laying? Uncomplicated!

WAKOL D 3270 SpaltTex is used just like other high-grade carpet adhesives: Apply the adhesive with a notched trowel, allow to air for 5-10 minutes, then fit the carpet and press down, rubbing down again after a few minutes. Finished!